

## Section 2

## Suspension

## CONTENTS

<b>Precautions .....</b>	<b>2-1</b>		
<b>Precautions.....</b>	<b>2-1</b>		
Precautions for Suspension .....	2-1		
<b>Suspension General Diagnosis.....</b>	<b>2A-1</b>		
<b>Diagnostic Information and Procedures.....</b>	<b>2A-1</b>		
Suspension and Wheel Symptom Diagnosis .....	2A-1		
<b>Front Suspension .....</b>	<b>2B-1</b>		
<b>Repair Instructions .....</b>	<b>2B-1</b>		
Front Fork Components .....	2B-1		
Front Fork Removal and Installation .....	2B-2		
Front Fork Disassembly and Assembly.....	2B-3		
Front Fork Inspection .....	2B-8		
Front Fork Parts Inspection.....	2B-8		
<b>Specifications.....</b>	<b>2B-9</b>		
Service Data .....	2B-9		
Tightening Torque Specifications.....	2B-9		
<b>Special Tools and Equipment.....</b>	<b>2B-10</b>		
Recommended Service Material.....	2B-10		
Special Tool .....	2B-10		
<b>Rear Suspension .....</b>	<b>2C-1</b>		
<b>Repair Instructions .....</b>	<b>2C-1</b>		
Rear Suspension Components .....	2C-1		
Rear Suspension Assembly Construction.....	2C-2		
Rear Swingarm Components.....	2C-3		
Rear Shock Absorber and Rear Shock Absorber Assembly Removal and Installation.....	2C-4		
Rear Suspension Inspection .....	2C-5		
Rear Shock Absorber Inspection .....	2C-5		
Rear Shock Absorber Gas Pressure Release.....	2C-5		
Rear Suspension Adjustment .....	2C-6		
Rear Swingarm Removal and Installation.....	2C-6		
Rear Swingarm Related Parts Inspection .....	2C-7		
Rear Swingarm Dust Seal / Bearing Removal and Installation.....	2C-8		
Cushion Lever and Cushion Rod Inspection.....	2C-9		
		Cushion Lever Bearing Removal and Installation .....	2C-10
		Crankcase Bracket Construction.....	2C-11
		Crankcase Bracket Removal and Installation .....	2C-12
		Crankcase Bracket Related Parts Inspection.....	2C-12
		Crankcase Bracket Bearing Removal and Installation .....	2C-13
		<b>Specifications .....</b>	<b>2C-14</b>
		Service Data.....	2C-14
		Tightening Torque Specifications.....	2C-14
		<b>Special Tools and Equipment .....</b>	<b>2C-15</b>
		Recommended Service Material .....	2C-15
		Special Tool .....	2C-15
		<b>Wheels and Tires .....</b>	<b>2D-1</b>
		<b>Precautions.....</b>	<b>2D-1</b>
		Precautions for Wheel and Tire.....	2D-1
		<b>Repair Instructions .....</b>	<b>2D-2</b>
		Front Wheel Components .....	2D-2
		Front Wheel Assembly Construction.....	2D-3
		Front Wheel Assembly Removal and Installation .....	2D-4
		Front Wheel Related Parts Inspection .....	2D-5
		Front Wheel Dust Seal / Bearing Removal and Installation .....	2D-6
		Rear Wheel Components.....	2D-8
		Rear Wheel Assembly Removal and Installation .....	2D-9
		Rear Wheel Related Parts Inspection .....	2D-11
		Tire Removal and Installation.....	2D-11
		Wheel/Tire/Air Valve Inspection and Cleaning .....	2D-13
		Air Valve Removal and Installation .....	2D-14
		Wheel Balance Check and Adjustment.....	2D-14
		<b>Specifications .....</b>	<b>2D-15</b>
		Service Data.....	2D-15
		Tightening Torque Specifications.....	2D-15
		<b>Special Tools and Equipment .....</b>	<b>2D-16</b>
		Recommended Service Material .....	2D-16
		Special Tool .....	2D-16

# Precautions

## Precautions

### Precautions for Suspension

B705H22000001

Refer to "General Precautions in Section 00 (Page00-1)".

---

#### **▲ WARNING**

All suspensions, bolts and nuts are an important part in that it could affect the performance of vital parts. They must be tightened to the specified torque periodically and if the suspension effect is lost, replace it with a new one.

---

#### **▲ CAUTION**

Never attempt to heat, quench or straighten any suspension part. Replace it with a new one, or damage to the part may result.

---