

## Section 5

## Transmission / Transaxle

## CONTENTS

<b>Precautions</b> .....	<b>5-1</b>	Movable Drive Face Component.....	5A-8
<b>Precautions</b> .....	<b>5-1</b>	Movable Drive Face Disassembly and	
Precautions for Transmission/Transaxle.....	5-1	Assembly.....	5A-8
<b>Automatic Transmission</b> .....	<b>5A-1</b>	Movable Drive Face Parts Inspection .....	5A-9
<b>Schematic and Routing Diagram</b> .....	<b>5A-1</b>	Oil Seal Removal and Installation .....	5A-10
Drive Train System .....	5A-1	Clutch Shoe / Movable Driven Face	
<b>Diagnostic Information and Procedures</b> .....	<b>5A-2</b>	Components.....	5A-11
Automatic Transmission Symptom Diagnosis.....	5A-2	Clutch Shoe / Movable Driven Face	
<b>Repair Instructions</b> .....	<b>5A-2</b>	Disassembly and Assembly .....	5A-12
Outer Clutch Cover Cushion Construction .....	5A-2	Clutch Shoe and Movable Driven Face Parts	
Clutch In / Stall Speed Inspection .....	5A-3	Inspection.....	5A-16
V-belt Type Continuously Variable Automatic		<b>Specifications</b> .....	<b>5A-17</b>
Transmission Removal and Installation .....	5A-3	Service Data.....	5A-17
Drive V-belt Inspection .....	5A-6	Tightening Torque Specifications.....	5A-17
Cooling Fan Filter Inspection .....	5A-6	<b>Special Tools and Equipment</b> .....	<b>5A-18</b>
Inner Clutch Cover Bearing Inspection .....	5A-7	Recommended Service Material .....	5A-18
Inner Clutch Cover Bearing Removal and		Special Tool .....	5A-18
Installation .....	5A-7		

# Precautions

## Precautions

### Precautions for Transmission/Transaxle

Refer to "General Precautions in Section 00 (Page00-1)".

B705H25000001