

Section 9

Body and Accessories

CONTENTS

Precautions	9-1	Parking Brake Switch (Brake-lock Switch)	
Precautions	9-1	Inspection.....	9B-11
Precautions for Electrical System	9-1	Trunk Box Switch Inspection.....	9B-11
Component Location	9-1	Specifications	9B-12
Electrical Components Location	9-1	Service Data.....	9B-12
Wiring Systems	9A-1	Special Tools and Equipment	9B-12
Schematic and Routing Diagram	9A-1	Special Tool	9B-12
Wiring Diagram	9A-1	Combination Meter / Fuel Meter / Horn.. 9C-1	
E-02, 19, 24, 54	9A-2	Repair Instructions	9C-1
E-03, 28, 33	9A-3	Combination Meter Components	9C-1
Wiring Harness Routing Diagram.....	9A-4	Combination Meter Removal and Installation	9C-1
Specifications	9A-8	Combination Meter Disassembly and	
Service Data	9A-8	Assembly.....	9C-1
Electrical	9A-8	Combination Meter Inspection	9C-2
Tightening Torque Specifications.....	9A-8	Fuel Level Meter Inspection	9C-2
Lighting Systems	9B-1	Fuel Level Gauge Inspection	9C-3
Repair Instructions	9B-1	Speedometer Inspection	9C-3
Front Combination Light Components	9B-1	Speed Sensor Removal and Installation	9C-3
Front Combination Light Removal and		Speed Sensor Inspection	9C-3
Installation	9B-2	Ignition Switch Inspection.....	9C-3
Headlight Bulb / Turn Signal Light Bulb /		Ignition Switch Removal and Installation.....	9C-3
Position Light Bulb Replacement	9B-2	Horn Inspection	9C-3
Headlight Beam Adjustment	9B-4	Horn Removal and Installation	9C-3
Rear Reflector / Rear Combination Light /		Specifications	9C-4
License Light Components	9B-4	Service Data.....	9C-4
Rear Reflector / Rear Combination Light /		Exterior Parts	9D-1
License Light Removal and Installation	9B-5	Schematic and Routing Diagram	9D-1
Rear Combination Light Bulb / License Light		Seat Lock Cable Routing Diagram.....	9D-1
Bulb Replacement.....	9B-6	Component Location	9D-2
Turn Signal / Side-stand Relay Inspection	9B-7	Exterior Components Location	9D-2
Turn Signal / Side-stand Relay Removal and		Removal Procedures Flow Chart	9D-3
Installation	9B-7	Repair Instructions	9D-4
Dimmer Switch Inspection.....	9B-7	Exterior Parts Components	9D-4
Turn Signal Switch Inspection.....	9B-8	Inner Cover Construction	9D-12
Passing Light Switch Inspection	9B-8	Seat Lock Cable Removal and Installation	9D-13
Horn Button Inspection	9B-9	Handlebar Cover Removal and Installation.....	9D-13
Rear Brake Light Switch Inspection	9B-9	Upper Meter Panel Removal and Installation....	9D-13
Front Brake Light Switch Inspection	9B-9	Front Leg Shield Cover Removal and	
Hazard Switch Inspection	9B-9	Installation	9D-13
Engine Stop Switch Inspection	9B-10	Wind Screen Removal and Installation	9D-14
Starter Button Inspection	9B-10	Front Panel Removal and Installation	9D-14
Ignition Switch Inspection	9B-11	Meter Panel Removal and Installation	9D-14
		Front Leg Shield Removal and Installation	9D-14

9-ii Table of Contents

Side Leg Shield Removal and Installation.....	9D-15	Recommended Service Material	9D-22
Under Cover Removal and Installation	9D-16	Body Structure.....	9E-1
Lower Leg Shield Removal and Installation	9D-16	Repair Instructions	9E-1
Helmet Box Front Cover Removal and Installation	9D-16	Body Frame Construction	9E-1
Front Frame Cover Removal and Installation ...	9D-17	Engine Mounting Bracket Bushing Replacement	9E-2
Seat Removal and Installation	9D-17	Engine Mounting Bushing Replacement	9E-2
Center Leg Cover Removal and Installation	9D-17	Side-stand Construction.....	9E-2
Front Box Removal and Installation	9D-18	Side-stand Removal and Installation.....	9E-3
Pillion Rider Handle Cover Removal and Installation	9D-19	Center Stand Construction.....	9E-3
Pillion Rider Handle Removal and Installation ..	9D-19	Center Stand Removal and Installation.....	9E-4
Center Frame Cover Removal and Installation ..	9D-19	Specifications	9E-4
Lower Frame Cover Removal and Installation ..	9D-19	Tightening Torque Specifications.....	9E-4
Frame Cover Removal and Installation.....	9D-20	Special Tools and Equipment	9E-4
Helmet Box Removal and Installation	9D-21	Recommended Service Material	9E-4
Footboard Removal and Installation	9D-21		
Special Tools and Equipment	9D-22		

Precautions

Precautions

Precautions for Electrical System

B705H29000001

Refer to "General Precautions in Section 00 (Page00-1)" and "Precautions for Electrical Circuit Service in Section 00 (Page00-2)".

Component Location

Electrical Components Location

B705H29003001

Refer to "Electrical Components Location in Section 0A (Page0A-7)".